

## 5. Tachometer

### A: SPECIFICATION

Since the meter panel assembly cannot be disassembled, do not remove or inspect the tachometer alone. (Do not remove the cover on the back surface.)